



ART 4x4 SERIES

POWER CONDITIONERS WITH FILTERING

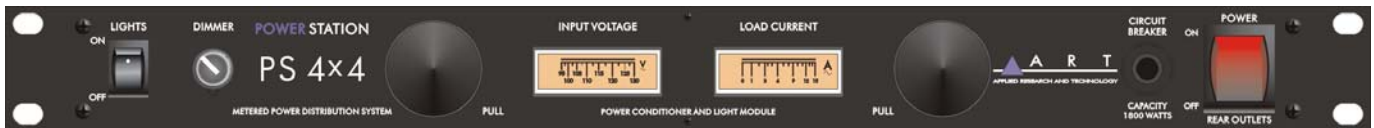

USER'S MANUAL

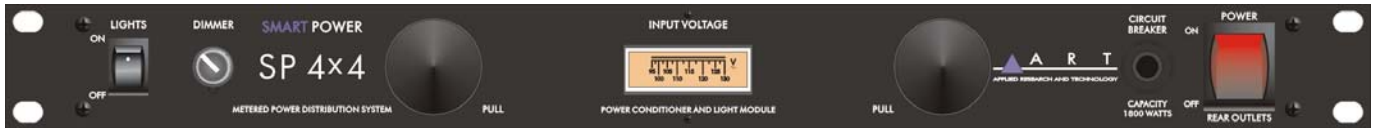

IMPORTANT SAFETY INSTRUCTIONS - READ FIRST



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltages inside the enclosure that may be sufficient to constitute a risk of shock



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

Read instructions Retain these safety and operating instructions for future reference. Heed all warnings printed here and on the equipment. Follow the operating instructions printed in this user guide.

Do not open (except to convert the 1/4-inch jacks from inputs to outputs. See page 4.) There are no user serviceable parts inside. Refer any service work to qualified technical personnel only.

Power sources Only connect the unit to mains power of the type described in this user guide or marked on the rear panel. The power source must provide a good ground connection.

Power cord Use the power cord with sealed mains plug appropriate for your local main supply as provided with the equipment. If the provided plug does not fit into your outlet consult your service agent. Route the power cord so that it is not likely to be walked on, stretched or pinched by items placed upon or against.

Grounding Do not defeat the grounding and polarization means of the power cord plug. Do not remove or tamper with the ground connection on the power cord.

Moisture To reduce the risk of fire or electrical shock, do not expose the unit to rain, moisture or use in damp or wet conditions. Do not place containers of liquid on it, which may spill into any openings

Heat Do not locate the unit in a place close to excessive heat or direct sunlight, as this could be a fire hazard. Locate the unit away from any equipment which produces heat, such as power supplies, power amplifiers and heaters.

Environment Protect from excessive dirt, dust, heat, and vibration when operating and storing. Avoid tobacco ash, drink spillage and smoke, especially that associated with smoke machines.

Handling Protect the controls from damage during transit. Use adequate padding if you need to ship the unit. To avoid injury to yourself or damage to the equipment, take care when lifting, moving or carrying the unit.

Servicing Switch off the equipment and unplug the power cord immediately if it is exposed to moisture, spilled liquid or the power cord or plug becomes damaged during a lightning storm or if smoke odor or noise is noted. Refer servicing to qualified technical personnel only.

Installation Install the unit in accordance with the instructions printed in the user guide.

OVERVIEW

We congratulate you on choosing an ART 4x4 Power Distribution Unit. You will find that they have been designed for easy use. The latest advances in power technology have been utilized in the design of these units. Please read all instructions carefully before operating.

ART 4x4 Series Power Distribution Systems feature a unique "4x4" AC jack layout on the back of the unit where four of the eight rear outlets are 1.25-inches apart, allowing the user to plug in wide power supplies and devices.

Built into the 4x4 series is a surge and spike protection system designed to protect powered equipment from harmful electric surges and spikes that are commonplace in venues. The unit also has RFI and EMI filtering to all but eliminate cable induced noise in the AC power.

A front-located brightly illuminated on/off switch ensures power up and confirmation of the power source. The unit has a total power capacity of 1800 watts, and has a conveniently front-mounted, 15 amp circuit breaker for quick resets when necessary.

The rugged, all steel chassis occupies 1U rack spaces and is intended for installation into standard 19-inch equipment racks. Applications for the 4x4 Pro Series Power Distribution Systems include live sound systems/PA, permanent or fixed installations, church, club and practice PA systems, DJ sound systems, home and project recording systems and monitor systems.

Please read all instructions carefully before operating.

Feature

All 4X4 Models (Power Base, Smart Power and Power Station) Feature:

- Front-Mounted Circuit Breaker Reset Switch
- Surge & Spike Protection
- EMI & RFI Filtering
- Unique “4X” Distribution on the Back- Four of the Eight Rear Switched Outputs are wider for Wall Wart Devices
- Total Power Capacity of 1800 watts
- Rugged All-Steel Chassis Occupies 1u Rack Space


Smart Power (SP) adds:

- 2 Front Pull Out LED Light Pipes
- Backlit Linear Meter to Monitor Input Voltage
- Separate On/Off Light Switch
- Adjustable Dimmer Dial

Power Station (PS) has all SP features, and adds:

- Backlit Ammeter to Monitor Load Current

ART 4x4 Series Family

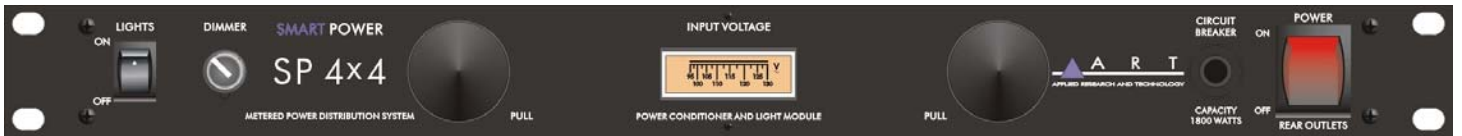

Domestic units (shown) Export metering configured accordingly



Rear layout (Domestic) the rear panel is the same for all three 4x4's.



Rear layout (Export) the rear is the same for all three 4x4's.

OPERATION

MAXIMUM LOAD

The eight circuit breaker protected outlets are rated at 15 amps, which is equivalent to 1800 watts at 120 volts. If the total load on the **4x4 POWER DISTRIBUTION** Unit's outlets (and rack lights on the SP & PS) exceed 15 amps, the circuit breaker will trip, cutting off power to your rack. If this happens, reduce the load by unplugging one or more units from the 4X4 POWER DISTRIBUTION UNIT. Then push the circuit breaker button in to reset it.

LED LAMPS (SP & PS)

The **4x4 POWER DISTRIBUTION** Unit's lamps pull out easily and may be aimed to provide the best illumination for your equipment. Adjust the DIMMER control for the desired brightness. The lights do not turn off automatically when the tubes are pushed in, so be sure to switch the RACK LIGHTS switch to the OFF position before pushing in the tubes.

POWER SWITCHES

The **4x4 POWER DISTRIBUTION** Unit's has a master POWER switch for the rear outlets as well as the lights (SP & PS). This switch glows when the unit is on.

WARRANTY INFORMATION

Limited Warranty (USA only)

Applied Research and Technology will provide warranty and service for this unit in accordance with the following warrants:

Applied Research and Technology, (ART) warrants to the original purchaser that this product and the components thereof will be free from defects in workmanship and materials for a period of **three** years from the date of purchase. Applied Research and Technology will, without charge, repair or replace, at its option, defective product or component parts upon prepaid delivery to the factory service department or authorized service center, accompanied by proof of purchase date in the form of a valid sales receipt.

Exclusions

This warranty does not apply in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs. This warranty is void if the serial number is altered, defaced, or removed.

ART reserves the right to make changes in design or make additions to or improvements upon this product without any obligation to install the same on products previously manufactured.

ART shall not be liable for any consequential damages, including without limitation damages resulting from loss of use. Some states do not allow limitations of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific rights and you may have other rights, which vary, from state to state. The warranty terms listed above are only valid within the United States of America.

For units purchased outside the United States, an authorized distributor of Applied Research and Technology will provide service. For information on warranty and service policies outside of the U.S., please contact your local distributor.

SERVICE

The following information is provided in the unlikely event that your unit requires service.

1. Be sure that the unit is the cause of the problem. Check to make sure that the unit has power supplied, that all cables are connected correctly, and that the cables themselves are in working condition. You may want to consult with your dealer for assistance in troubleshooting or testing your particular configuration.
2. If you believe that the ART unit is at fault, go to www.artproaudio.com. Select "Support", then "Return Authorization Request" to request a return authorization number.
3. If you are returning the unit for service, pack the unit in its original carton or a reasonable substitute. The original packaging may not be suitable as a shipping carton, so consider putting the packaged unit in another box for shipping. Print the RA number clearly on the outside of the shipping box. Print your return shipping address on the outside of the box.
4. Include with your unit: a note with the RA number and your contact information, including a return shipping address (we cannot ship to a P.O. box) and a daytime phone number, and a description of the problem, preferably attached to the top of the unit. Also include a copy of your purchase receipt.

Please fill in the following information for your reference:

Date of purchase: _____

Purchased from: _____

Serial Number: _____

SPECIFICATIONS

Power Capacity	1800 Watts
Circuit Breaker	15 Amp Domestic, 8 Amp Export, Front Location
Power Outlets	Rear Outlets (x 8)
Power Switch	Front location - On/Off
Power Switch Illumination	Yes - In "On" Position
Filtering	EMI & RFI
Protection Circuit	Surge & Spike Protection
Light Pipes	PB4x4 - None SP4x4 - 2 Front Pull-Out Shock Mounted w/dimmer PS4x4 - 2 Front Pull-Out Shock Mounted w/dimmer
Metering	PB4x4 - None SP4x4 - Input Voltage, Linear PS4x4 - Input Voltage Linear, Load Current, Linear
Construction	All - Steel Chassis
Dimensions (HWD)	1.75-inch x 19-inch x 6.5-inch 44mm x 482mm x 165mm
Weight	5.5 lbs. (2.5 kg) PB4x4 6.3 lbs. (2.8 kg) SP4x4 6.6 lbs. (3.0 kg) PS4x4

ART maintains a policy of constant product improvement. Therefore, specifications are subject to change without notice.



www.artproaudio.com
E-mail: support@artproaudio.com

© 2016 Applied Research & Technology